## **Magnescale**®

# **AC20-B100**

お買い上げいただき、ありがとうございます。 ご使用の前に、この取扱説明書を必ずお読みください。 ご使用に際しては、この取扱説明書どおりお使いください。 お読みになった後は、後日お役に立つこともございますので、必ず保管してください。

Thank you for purchasing this Magnescale product. Read all the instructions in the manual carefully before use and strictly follow them. Be sure to keep this manual for future reference.

取扱説明書 / Instruction Manual

#### 商標について

Microsoft<sup>®</sup> Windows<sup>®</sup>は、マイクロソフト社の登録商標です。 Intel<sup>®</sup> Core<sup>™</sup>i3 は、インテル社の登録商標・トレードマークです。 そのほか、本書で登場するシステム名、製品名、サービス名は、一般に各開発メーカーの登録商標ある いは商標です。なお、本文中では TM<sup>∞®</sup> 等のマークは明記していません。

#### [注意]

この取扱説明書の表記および表示画面は、一部を除き Windows7 英語版での実行を前提に記述されています。ほかの OS では一部の機能に制約を受けたり、表示が異なっている場合があります。

 ・本機、および本機に付属のソフトウェアを使用したことによって生じた損害、遭失利益、および第 三者からのいかなる請求などにつきましても、当社は一切その責任を負いかねます。
 ・本機、および本機に付属のソフトウェアの仕様は、改良のため予告無く変更することがありますが、 ご容赦ください。

#### Trademarks

Microsoft Windows is the registered trademark of Microsoft Corporation.

Intel<sup>®</sup> Core<sup>™</sup>i3 is the registered trademark of Intel Corporation.

Other system names, product and service names described in the instruction manual are trademarks or registered trademarks of their corresponding manufacturers.

#### Note

The text and display screens of this instruction manual, with some exceptions, assume the use of a computer running Windows7. For other operating systems, there might be cases such as restricted functionalities and or different displays.

 IN NO EVENT WILL MAGNESCALE CO LTD OR ITS SUPPLIERS BE LIABLE TO YOU FOR ANY CONSEQUENTIAL OR INCONSEQUENTIAL DAMAGES, INCLUDING ANY LOST PROFITS OR LOST SAVINGS OR ANY CLAIMS MADE BY A THIRD PARTY ARISING OUT OF USE OF THE HARDWARE SYSTEM AND ITS SOFTWARE DESCRIBED IN THIS MANUAL.

• The specification of the products and its software may be changed without prior notice.

# 目次

1.	概要	1
1-1.	はじめに	1
1-2.	主な機能と特長	1
1-3.	製品構成	1
2	タ邨の夕サと働き	2
۷.		∠
3.	動作環境とセットアップ	3
3-1.	対応するシステム環境	3
	3-1-1. 対応スケール	3
	3-1-2. コンピューター環境	3
3-2.	ソフトウェアのインストール	4
3-3.	ドライバのインストール	8
3-4.	ソフトウェアのアンインストール	10
3-5	スケールの接続	11
0 0.		
<b>4</b> .	ソフトウェアの起動とスケール電源投入	12
<b>4.</b> 4-1.	ソフトウェアの起動とスケール電源投入 ソフトウェアの起動	<b>12</b> 12
<b>4.</b> 4-1. 4-2.	ソフトウェアの起動とスケール電源投入	12 12 13
<b>4.</b> 4-1. 4-2. 4-3.	<b>ソフトウェアの起動とスケール電源投入</b> ソフトウェアの起動 ソフトウェアの終了 スケール電源投入	12 12 13 14
<b>4.</b> 4-1. 4-2. 4-3. 4-4.	<b>ソフトウェアの起動とスケール電源投入</b> ソフトウェアの起動 ソフトウェアの終了 スケール電源投入 スケール電源切断	12 12 13 14 14
<b>4.</b> 4-1. 4-2. 4-3. 4-4. 4-5.	<b>ソフトウェアの起動とスケール電源投入</b> ソフトウェアの起動 ソフトウェアの終了 スケール電源投入 スケール電源切断 システム設定	12 12 13 14 14 15
<b>4.</b> 4-1. 4-2. 4-3. 4-4. 4-5. <b>5.</b>	ソフトウェアの起動とスケール電源投入 ソフトウェアの起動	12 12 13 14 14 15 16
<b>4.</b> 4-1. 4-2. 4-3. 4-4. 4-5. <b>5.</b> 5-1.	<ul> <li>ソフトウェアの起動とスケール電源投入</li> <li>ソフトウェアの起動</li> <li>ソフトウェアの終了</li> <li>スケール電源投入</li> <li>スケール電源切断</li> <li>システム設定</li> <li>リサージュ信号観測</li> <li>シングルヘッドスケールのリサージュ観測 (MGS Lissajous)</li> </ul>	12 12 13 14 14 15 15 16
<b>4.</b> 4-1. 4-2. 4-3. 4-4. 4-5. <b>5.</b> 5-1.	<ul> <li>ソフトウェアの起動とスケール電源投入</li> <li>ソフトウェアの起動</li> <li>ソフトウェアの終了</li> <li>スケール電源投入</li> <li>スケール電源切断</li> <li>システム設定</li> <li>リサージュ信号観測</li> <li>シングルヘッドスケールのリサージュ観測 (MGS Lissajous)</li> <li>5-1-1. MGS Lissajous 画面</li> </ul>	12 12 13 14 14 15 16 16 16
<b>4.</b> 4-1. 4-2. 4-3. 4-4. 4-5. <b>5.</b> 5-1.	<ul> <li>ソフトウェアの起動とスケール電源投入</li> <li>ソフトウェアの起動…</li> <li>ソフトウェアの終了</li> <li>スケール電源投入</li> <li>スケール電源切断</li> <li>システム設定</li> <li>リサージュ信号観測</li> <li>シングルヘッドスケールのリサージュ観測 (MGS Lissajous)</li> <li>5-1-1. MGS Lissajous 画面</li> <li>5-1-2. 観測の開始と停止</li> </ul>	12 13 14 14 15 16 16 18
<b>4.</b> 4-1. 4-2. 4-3. 4-4. 4-5. <b>5.</b> 5-1. 5-2.	<ul> <li>ソフトウェアの起動とスケール電源投入</li></ul>	12 13 14 14 15 16 16 16 18 18
<b>4.</b> 4-1. 4-2. 4-3. 4-4. 4-5. <b>5.</b> 5-1. 5-2.	<ul> <li>ソフトウェアの起動とスケール電源投入</li></ul>	12 13 14 14 15 16 16 16 18 20 20

6.	トラブル	シューティング	.24
6-1.	電源接続	時のトラブル	24
	6-1-1.	接続ボタンが表示されない	24
	6-1-2.	接続ボタンを押してもスケールへの電源が投入されない	24
	6-1-3.	電源投入時に「スケール電源を投入できませんでした」	
		と表示される	25
6-2.	観測時の	トラブル	26
	6-2-1.	「Start」ボタンを押しても計測が始まらない	26
	6-2-2.	「Stop」ボタンを押しても計測が終了しない	26
6-3.	電源切断	時のトラブル	27
	6-3-1.	接続ボタンを押しても電源切断に失敗する	27
7.	仕様		.28
8.	外形寸法	図	.29

# 1. 概要

#### 1-1. はじめに

AC20-B100 は、スケールの故障判定や設置・交換後の動作確認を行なうための 観測ツールです。専用ソフトウェア<sup>\*1</sup>をダウンロードしたコンピューターと対 応スケールに接続して使用します。

※1: 2015年10月31日時点で対応している弊社製品に対し使用可能なソフトウェアです。 弊社ホームページからダウンロードしていただけます。

#### 1-2. 主な機能と特長

#### リサージュ信号観測

- スケールに対応した観測機能を使用します。
- リサージュ観測機能(シングルヘッドスケール用)
- RS リサージュ観測機能 (ダブルヘッドスケール用)

#### 1-3. 製品構成

AC20-B100	
ソフトウェア	MGS Monitoring System
	弊社ホームページからダウンロードしていただけます。
USB ケーブル	× 2(付属品)
別売アダプタケーブル	CE35-02 (対応コントローラ:三菱電機 (株))
	CE36-02 (対応コントローラ:ファナック (株))
	CE37-02 (対応コントローラ: SIEMENS AG)
専用ケーブル	SR77 / SR87 / RU77 のみに使用します。弊社営業にお問い 合わせください。

# 2. 各部の名称と働き



名称	説明
① ENCODER コネクタ	アダプタケーブル (別売)を用いてスケールと接続し
	ます。
② USB コネクタ	付属の USB ケーブルを用いてコンピューターと接続
	します。
③ AUX-POWER コネクタ	ダブルヘッドスケールを使用する場合に、付属の USB
-	ケーブルを用いてコンピューターと接続します。 (外
	部 DC5 V 電源アダプタに接続することもできます。)

### 3. 動作環境とセットアップ

#### 3-1. 対応するシステム環境

#### 3-1-1. 対応スケール

株式会社マグネスケール製

シングルヘッドスケール	ダブルヘッドスケール
SR27A シリーズ	RS87 シリーズ
SR67A シリーズ	RS97 シリーズ
SR77 シリーズ <sup>*</sup>	
SR87 シリーズ <sup>*</sup>	
RU97 シリーズ	
RU77 シリーズ <sup>**</sup>	

※: 専用ケーブルが必要です。弊社営業にお問合せください。

#### 3-1-2. コンピューター環境

項目	環境
CPU	Intel Core i3 または同等以上を推奨 <sup>*1</sup>
RAM	1 GB 以上を推奨**1
OS	Windows 7 (32bit/64bit の各エディション )
Display	1080 × 800 ピクセル以上を推奨 <sup>**1</sup>
USB	$2.0^{*2}$

※1: 使用 OS の要求スペックを満たす必要があります。

※ 2: USB3.0 ポートを使用する場合は、USB2.0 に対応したハブが必要です。

#### 3-2. ソフトウェアのインストール

1 MGS Monitoring System を弊社サイトよりダウンロードします。 URL: http://www.magnescale.com/mgs/product/

Magnescale				Japanese	English	German
Homo	Products	About co	mpany	News release	Contact	
HOME > Products > Mag	nescale > AC20 I	Monitoring System				
LASERSCALE	AC20	Monitorin	ig Sy	stem Magnesci	ile	
Magnescale.						
Linear						
SR27A			14			
SR67A					4	
SR77			10000			
SR87						
SR74/75				Features Spec	fications Manua	Software
SR84/85						$\square$
SL110	Feature					
R\$97						
RU97						
RU77						
R5310						
Interpolator						
M3100/110						
MJ830/831						
Counter						
LH70						
LH71						
LH72						
LY71						
LY72						
LG20						
Software						
AC20 Monitoring System						
Digital Gauge						
HOME		Product				Terms of use
About company		Laserscale				
News release		Magnescale				
Contact		Digital Gauge				
MGSM	au Sys er zip					

ダウンロードファイル

 ダウンロードしたインストーラファイルをダブルクリックします。 ファイル内のフォルダが表示されます。

💮 🕞 - 🖟 《 デスクトップ 🕨 I	MGSMonSysInstaller 🕨	▼ ¥; MGSMon ♪
整理 ▼ ライブラリに追加 ▼	共有 ▼ 新しいフォルダー	≣ ▼ 🔟 🔞
> 🚖 お気に入り	名前	更新日時
	퉬 Drivers	2015/11/10 20:28
▷ 🎇 ライブラリ	ISSetupPrerequisites	2015/11/10 20:28
	🔤 setup.exe	2015/11/06 13:59
▲ 👰 コンピューター		
> 🏭 ローカル ディスク (C:)		
> 🧫 ボリューム (D:)		
▷ 🖣 ネットワーク		
	< III	۴.
3 個の項目		

3

「setup.exe」をダブルクリックします。



- 4 「次へ (N)>」をクリックします。 ライセンス条項が表示されます。
- 5 合意する場合は「使用許諾の条項に同意します」を選択した後に「次へ(N)>」 をクリックします。

B MGSMonitoringSystem - InstallShield Wizard	23
使用計括契約1 次の使用計括契約書を注意深(お読みください。	5
ソフトウェア使用許諾契約書	* II
この契約はお客様と株式会社マグネスケール(以下当社といいます)) の間の契約です。お客様は本ソフトウェアをインストールしたことを もって、この契約に同意したことになります。お客様がこの契約に同 できない場合には、インストールを終了し、本ソフトウェアすべて( ンストーラ及び付風品マニュアル及びその他の印刷物一式、その他の- 切のもの)を直ちに入手元に返品してください。	<u>ال</u> ۲ ۲
● 使用語語契約の条項に同意しません(D)	
InstalShield	211

ユーザー情報画面が表示されます。

揚 MGSMonitoringSystem - InstallShield Wizard	×
ユーザー情報 情報を入力してください。	3
ユーザー名(U): 磁気 太郎	
附属(O): 	
InstallShield	キャンセル

- ユーザー情報画面に入力をします。
   ユーザー名:使用者名
   所属 : 会社名
- 7 「次へ (N)>」をクリックします。 インストールの準備ができたことを知らせる画面が表示されます。



8 「インストール」をクリックします。 インストールが開始されます。 インストール中はプログレスバーが表示されます。



9 以下の画面が表示されたら、「完了」をクリックします。

🖞 MGSMonitoringSystem - InstallShield Wizard				
2	InstallShield ウィザードを完了しました			
	InstaliShield ウィザードは、MGSMonitoringSystem を正常に インストールしました。「完了」をグリックして、ウィザードを終了してく ださい。			
2				
	< 戻る( <u>B</u> ) <b>完了(E)</b> キャンセル			

10 コンピューターのデスクトップ上に「MGSMonitoringSystem」アイコンが表 示されたことを確認します。



インストール終了です。

#### 3-3. ドライバのインストール

- **1** AC20-B100 を付属の USB ケーブルでコンピューターに接続します。
- **2** 3-2章でインストールしたインストーラ内の「Drivers」フォルダをクリック します。
- **3** 「CDM v2.12.06 WHQL Certified.zip」ファイルをダブルクリックします。



ファイルが解凍されます。

- 4 コンピューターのコントロールパネルの「デバイスマネージャー」をクリックします。
- 5 「Magnescale AC20-B100」を右クリックし、「ドライバーソフトウェアの更新...」を選択します。



ドライバーソフトウェアの更新画面が開きます。

- 6 「コンピューターを参照してドライバーソフトウェアを検索します(R)」をク リックします。

- B - C - 2 & C	×
🕞 📱 ドライバー ソフトウェアの更新 - Magnescale AC20-B100	
どのような方法でドライバー ソフトウェアを検索しますか?	
▶ ドライバー ソフトウェアの最新版を自動検索します(S) このデバイス用の最新のドライバー ソフトウェアをコンピューターとインター ネットから検索します。ただし、デバイスのインストール設定でこの機能を無効 にするよう設定した場合は、検索は行われません。	
→ コンピューターを参照してドライバー ソフトウェアを検索します(R) ドライバー ソフトウェアを手動で検索してインストールします。	
	·>tul

7 ドライバソフトウェアを検索する場所に、手順3で解凍したファイルを指定し、「次へ(N)」をクリックします。

	×
④ 1 ドライバー ソフトウェアの更新 - Magnescale AC20-B100	
コンピューター上のドライバー ソフトウェアを参照します。	
次の場所でドライバー ソフトウェアを検索します: (MGSMonSysInstaller¥Drivers¥CDM v2.12.06 WHQL Certifies ▼ 参短(R)	
☑ サブフォルダーも検索する(1)	
⇒ コンピューター上のデバイスドライバーの一覧から選択します(_) この一覧には、デバイスと互換性があるインストールされたドライバー ソフトウェア と、デバイスと同じカテゴリにあるすべてのドライバー ソフトウェアが表示されま す。	
(次へ(N)) キャ	ンセル

デバイスドライバのインストールが開始されます。

- 💮 🧕 ドライバー ソフトウェアの更新 USB Serial Converter ドライバー ソフトウェアが正常に更新されました。 このデバイスのドライバー ソフトウェアのインストールを終了しました: USB Serial Converter 閉じる(C)
- 8 以下の画面が表示されたら、「閉じる (C)」をクリックし、インストール完了です。

#### 3-4. ソフトウェアのアンインストール

- コンピューターのコントロールパネルの「プログラムと機能」をクリックします。
- **2** 表示されたリストから「MGSMonitoringSystem」をダブルクリックします。



以下のダイアログが表示されます。



**3** 確認のうえ、「はい(Y)」をクリックします。

アンインストール中はプログレスバーが表示されます。 「プログラムと機能」内の「MGSMonitoringSystem」が消えたらアンインストー ル完了です。

#### 3-5. スケールの接続

別売のアダプタケーブルを使用してスケールと接続します。

※ SR77 / SR87 / RU77 は専用ケーブルが必要になりますので、弊社営業にお問い合わ せください。



#### 接続後の確認

全てのケーブルを接続後、接続に問題ないことを AC20-B100 の LED で確認します。

コンピューターの電源をいれた状態で確認してください。

USB コネクタ部 : 緑色点灯 ENCODER コネクタ部: 緑色点灯

# 4. ソフトウェアの起動とスケール電源投入

#### 4-1. ソフトウェアの起動

1 コンピューターのデスクトップ上の MGSMonitoringSystem をダブルクリックします。



ソフトウェアが起動します。

MGS Monitoring System			_	
Magnescale 1000				System
123456 MGSLIssejous MGS RS L	ssajous			
Measure Start Record	scale Information Scale Type : Position : Image: Information Image: Imag	Protocol : 0.000000	Sertal Number :	opping
0 Sove Deta Clore				
	Recording Data File	18 -0.6 -0.4 -0.2 0 0.2 0.4 : 0.000000 Cos : 0.000000	0.6 0 0.000000	

■接続ボタン

AC20-B100 が適切にコンピューターに接続されている場合、画面左側に、接続 された AC20-B100 のシリアル番号の記載されたボタンが表示されます。ソフト ウェアが起動した時点で AC20-B100 が接続されていない場合、接続された時点 でボタンが表示されるようになります。

このボタン (接続ボタン) は、スケールへの電源接続時に使用します。シリアル番号の文字色で、スケールへの電源接続状態を示します。

白 : OFF 水色: ON

#### 4-2. ソフトウェアの終了

- **1** スケールへの電源接続がOFFになっている (接続ボタンの文字が白色) ことを 確認します。
- **2** 画面右上の「×(閉じる)」ボタンをクリックします。

Magnescale				System
10000 MGSLissejous MGS RS Lissejous	tion			
Measure	<ul> <li>Scale Type :</li> </ul>			
Start	Position :	0.000000		
Record Lissajous				
0			121.0-	
			38.0	
Save			<b>N N N N N N N N N N</b>	
Deta Clear			7.0	
			42.0	
			x	
			22.0	
			12.0	
	-0.8 Sin :	-0.6 -0.4 -0.2 0 0.2 0.4 0.000000 Czs: 0.000000	0.6 0 10	
Recording Da	a File			

#### 4-3. スケール電源投入

接続ボタンをクリックします。
 接続されたスケールへの電源が投入されます。
 接続ボタンの文字が水色に変化します。



#### 4-4. スケール電源切断

1 スケールの測定機能が停止している状態 (状態表示が「Stopping…」になって いる状態) であることを確認します。

MGS Monitoring Sys	tem and an and					00
Magne	scale					System
10000	MGSUssajous MGS.Rd	Lissajous				
		Scale Information Scale Type :	Protocol :	Serial Number :		
	Start	Position :	0.000000		Stopping	
	Record	Lissejour				

2 接続ボタンをクリックします。

スケールへの電源が切断され、AC20-B100への電源も切断されます。 電源接続ボタンの文字が白色に変化します。



#### 4-5. システム設定

メッセージの言語や画面表示方法など、ソフトウェアの設定を行ないます。 ここで設定した内容は、ソフトウェアを正常終了するときに自動的に保存されま す。

**1** ソフトウェア画面右上の「System」ボタンをクリックします。



「SystemMenu」タブが開き、システム設定画面が表示されます。

MGS Monitoring Sys	AMEL PROVIDENT AND A DESCRIPTION OF A DESCRIPANTE A DESCRIPANTE A DESCRIPANTE A DESCRIPTION OF A DESCRIPTION	
Magne	ale 0000	System
10000	SSLissayous MGS RS Lissayous SystemMenu	
	System Information	
	System Setting - Ourset Culture : 日本道 (日本) Language : <mark>Ja-J<sup>a</sup> -</mark> Ja-J <sup>a</sup>	
	Applicator Seting	
	Application Type : East Window Mode : Sngleton : Sngleton : Sngleton : Mindow Mode : Sngleton : Mindow Mindow Mode : Sngleton : Mindow Mode :	
	Technikova Dala Folde : CHUaeskoh-shma;uDeaktop Template File :	
	SmartSCAE Setting	
	Dec Device ID :  Oteck Type :  Check	

#### System Information

ソフトウェアの名称とバージョンを示しています。

#### System Setting

Language : メッセージの言語を選択します。(日本語 / 英語) Expert Mode: ソフトウェアメンテナンス用の機能です。通常は使用しません。

#### **Application Setting**

Window Mode : 画面表示を選択します。(タブ表示 / シングル画面) Default Module: ソフトウェア起動時に標準で表示される機能を選択します。 Data Folder : データ保存の際のフォルダを設定します。

Smart Setting は使用しません。

# 5. リサージュ信号観測

#### 5-1. シングルヘッドスケールのリサージュ観測 (MGS Lissajous)

SR シリーズや RU シリーズなど、シングルヘッドのスケールのリサージュを観 測する場合は、リサージュ観測機能「MGS Lissajous」を使用します。

# Control (1) Co

#### 5-1-1. MGS Lissajous 画面

① スケール情報

接続されているスケールの情報を示します。

② スケールの位置と状態

スケールが読み取っている位置情報と状態を示します。回転スケール(エン コーダの場合、0度から360度で表示され、直線スケールの場合、絶対位置(単 位:mm)で表示されます。観測停止中の位置情報は不定です。

③ リサージュ表示

スケールのセンサ信号をリサージュ表示したグラフです。2つの赤い点線内 に信号が入っているときは、信号は正常です。

④ 信号強度レベル表示

リサージュ信号の信号強度を示すグラフです。(%表示)リサージュ表示上の 水色の線と同等です。

⑤ 操作ボタン

観測の開始 / 停止を行ないます。

#### Control 欄詳細

Measuring: [Start/Stop] ボタン

観測を開始、停止します。スケールに電源が投入されていて、かつ特定のスケー ルが「Scale Information」上で選択されている状態で使用できます。スケールの 電源切断は、必ず観測を停止した状態で行なってください。

Record Lissajous Data:チェックボックス 観測しているリサージュ情報を記録する場合、このチェックボックスを On にし

ます。観測中のリサージュデータを蓄積します。

Save:「Save Data」ボタン 蓄積されたリサージュデータをフォルダに保存します。データの保存は必ず観測 を停止した状態で行なってください。

Clear Recorded Data:「Clear Data」ボタン 蓄積されたデータを消去します。

#### 5-1-2. 観測の開始と停止

1 MGSMonitoringSystem ソフトウェアが起動した状態で、「MGS Lissajous」 タブをクリックします。 以下のような画面が表示されます。

A Montang State CALL MARKET AND A STATE A

- 2 スケールに電源が投入されていること(接続ボタンの文字表示が水色になっていること)を確認します。
- **3** 「Scale Information」のコンボボックスを右クリックし、接続するスケールを 選択します。



「Scale Information」欄にスケールの型名、プロトコル名、シリアル番号が表示されます。

**4** 「Control」欄の「Measuring:【Start/Stop】」ボタンをクリックします。 状態表示が「Stopping…」から「Measuring…」に変化し、観測が開始されます。



状態表示が「Measuring…」の状態で「Contorl」欄の「Measuring:【Start/Stop】」 ボタンを押すと、観測が停止します。状態表示は「Stopping…」に変わります。

#### 5-2. ダブルヘッドスケールのリサージュ観測 (MGS RS Lissajous)

RS シリーズなど、ダブルヘッドのスケールのリサージュを観測する場合は、リ サージュ観測機能「MGS RS Lissajous」を使用します。



#### 5-2-1. MGS RS Lissajous 画面

① スケール情報

接続されているスケールの情報を示します。観測時には、スケールの位置情報と状態もここに表示されます。位置情報は0度から360度で表示されます。 観測停止中の位置情報は不定です。

② リサージュ表示

スケールの2つのヘッド1/2のセンサ信号をリサージュ表示したグラフです。 2つの赤い点線内に信号が入っているときは、信号は正常です。

信号強度レベル表示

リサージュ信号の信号強度を示します。(%表示)リサージュ表示上の水色の線と同等です。

④ レベル角度表示

角度0~360度のときの信号強度レベルを示します。

⑤ 操作ボタン

観測の開始 / 停止を行ないます。

#### 操作ボタン表示部詳細

#### 「Start/Stop」ボタン

観測を開始、停止します。スケールに電源が投入されていて、かつ特定のスケー ルが「Scale Information」上で選択されている状態で使用できます。スケールの 電源切断は、必ず観測を停止した状態で行なってください。

#### 「Record」ボタン

観測しているリサージュ情報を記録する場合、このチェックボックスを On にします。観測中のリサージュデータを蓄積します。

#### 「Save」ボタン

蓄積されたリサージュデータをフォルダに保存します。データの保存は必ず観測 を停止した状態で行なってください。

#### 「Data Clear」ボタン

蓄積されたデータを消去します。

#### 「Set Origin」ボタン

その時点の位置情報を原点に設定します。この設定は一時的なものです。ソフト ウェアを終了すると原点位置は元に戻ります。(スケールの原点を変更する設定 ではありません。)

#### 5-2-2. 観測の開始と停止

1 MGSMonitoringSystem ソフトウェアが起動した状態で、「MGS RS Lissajous」 タブをクリックします。 以下のような画面が表示されます。



- 2 スケールに電源が投入されていること(接続ボタンの文字表示が水色になっていること)を確認します。
- **3** 「Scale Information」のコンボボックスを右クリックし、接続するスケールを 選択します。



「Scale Information」欄にスケールの型名、プロトコル名、シリアル番号が表示されます。

**4** 「Measure」欄の「Start」ボタンをクリックします。 状態表示が「Stopping…」から「Measuring…」に変化し、観測が開始されます。



状態表示が「Measuring…」の状態で「Measure」欄の「Stop」ボタンを押すと、 観測が停止します。状態表示は「Stopping…」に変わります。

# 6. トラブルシューティング

#### 6-1. 電源接続時のトラブル

#### 6-1-1. 接続ボタンが表示されない

原因	対処
AC20-B100 が コ ン ピ ュ ー ターに接続されていない。	接続を確認してください。AC20-B100 の USB LED が 緑点灯していれば、正常に接続されています。
ドライバがインストールさ れていない。	「3-3. ドライバのインストール」に従って、ドライバソ フトウェアをインストールしてください。
USB ケーブルが長すぎる。	USB ケーブルは USB 規格により 5 m 以内と定められ ています。規格に準拠した USB ケーブルに交換してく ださい。
USB ケーブルにノイズが重 畳している。	USB ケーブル(とコンピューター)をノイズ源からでき るだけ離してご使用ください。ノイズの大きな環境で使 用している場合、USB ケーブルにノイズが重畳し、正 常に通信できない場合があります。

#### 6-1-2. 接続ボタンを押してもスケールへの電源が投入されない

原因	対処
AC20-B100 とスケールが接 続されていない。	<ol> <li>AC20-B100とアダプタケーブルとの接続を確認 してください。AC20-B100のエンコーダ LED が 緑点灯していれば、アダプタケーブルは正常に AC20-B100に接続されています。</li> </ol>
	<ol> <li>アダプタケーブルとスケールケーブルとの接続を 確認してください。</li> </ol>
	<ol> <li>3 スケールケーブルとスケールとの接続を確認して ください。</li> </ol>
電力が足らない。	RS シリーズなど、電力消費の多いスケールの場合、コ ンピューターからの USB ケーブルによる電源のバス供 給のみでは電力が足らない場合があります。AC20-B100 とコンピューターを USB ケーブルで接続してください。 (この場合、コンピューターと AC20-B100 とは 2 本の USB ケーブルで接続されることになります。)
別のスケールに接続した際 に、正常に電源切断が行な われなかった。	ソフトウェアを一度終了し、AC20-B100のUSBコネ クタを抜き差しして、再度ソフトウェアを起動してから 接続してください。ソフトウェアを起動したまま別のス ケールに接続すると、接続遮断操作が適切に行なわれず に通信が正常にできなくなることがあります。

#### 6-1-3. 電源投入時に「スケール電源を投入できませんでした」と 表示される

原因	対処
電力が足らない。	スケールと AC20-B100 との間のケーブルが長い場合、 稀にケーブルの内部抵抗のため、電力不足が発生する 場合があります。AC20-B100 とコンピューターを USB ケーブルで接続してください。 (この場合、コンピューターと AC20-B100 とは 2 本の USB ケーブルで接続されることになります。)
別のスケールに接続した際 に、正常に電源切断が行な われなかった。	ソフトウェアを一度終了し、AC20-B100のUSBコネ クタを抜き差しして、再度ソフトウェアを起動してから 接続してください。ソフトウェアを起動したまま別のス ケールに接続すると、接続遮断操作が適切に行なわれず に通信が正常にできなくなることがあります。
対応しないスケールに接続 されている。	MGS Monitoring Software は特定のスケールにのみ接続 が可能です。接続可能なスケール製品については、「3- 1-1. 対応スケール」の項を参照してください。
適切なケーブルが使用され ていない。	SR77 / SR87 / RU77 シリーズの場合のみ、特殊なス ケールケーブルが必要になります。弊社営業へお問合せ ください。

#### 6-2. 観測時のトラブル

#### 6-2-1. 「Start」ボタンを押しても計測が始まらない

原因	対処
AC20-B100 に電源が入って いない。	ソフトウェア画面左側のデバイスリストから接続したい AC20を選択し、電源を投入してください。 適切に電源が投入されると、接続ボタンの文字が水 色になります。その後、適切なスケールを「Scale Information」のコンボボックスから選択すると、計測 を開始することができます。
適切なスケールが選択され ていない。	電源が投入されている状態で、「Scale Information」の コンボボックスから接続したいスケールを選択してくだ さい。
対応していないスケールが 選択されている。	MGS Lissajous 機能はシングルヘッドスケール用の機能 です。ダブルヘッドスケールは MGS RS Lissajous 機 能をご利用ください。
	MGS RS Lissajous 機能はダブルヘッドスケール用の機 能です。シングルヘッドスケールは MGS Lissajous 機 能をご利用ください。
スケールが正しく応答しな い。	以前の観測時に、正しく電源を切断せずに再度電源を投入した可能性があります。AC20-B100のUSBコネクタを抜き差しして、ソフトウェアを再起動した状態で「Start」ボタンを押してください。 それでも正常に観測できない場合、スケールが正しく動作していない可能性があります。弊社サービスへお問い合わせください。

#### 6-2-2. 「Stop」ボタンを押しても計測が終了しない

原因	対処
AC20-B100 との接続ケーブ ルが抜けている。	右上の「×」ボタンをクリックして、ソフトウェアを強 制終了してください。その後、ソフトウェアを再起動し、 AC20-B100との接続を確認した後、電源投入からやり 直してください。

#### 6-3. 電源切断時のトラブル

6-3-1. 接続ボタンを押しても電源切断に失敗する

原因	対処
計測中である。	「Stop」ボタンを押して計測を終了し、状態表示が 「Stopping…」と表示されていることを確認した後、電 源切断を行なってください。状態表示が「Measuring…」 となっている場合は計測中です。 電源切断は計測を停止した状態でなければ行なえません。

#### AC20-B100

項目	仕様
コンピューターとの接続	USB 2.0 Full Speed (12 Mbps)
消費電力	最大 0.4 W (AC20-B100 単体)
入力電圧範囲	DC 5 V ± 0.25 V (USB バスパワー規格 )
使用温度範囲	0 ℃ ~ 40 ℃ ( 結露なきこと )
保存温度範囲	-10 °C ~ 60 °C ( 結露なきこと )
質量	150 g
外形寸法	「8. 外形寸法図」をご参照ください



# Contents

1.	Outline .		1
1-1.	Introduct	ion	1
1-2.	Major fun	ctions and features of the software	1
1-3.	Product c	onfiguration	1
2.	Names a	nd functions of each part	2
3.	System e	environment and setup	3
3-1.	Compatib	le system environment	3
	3-1-1.	Compatible magnescales	3
	3-1-2.	System requirement	3
3-2.	Software i	nstallation	4
3-3.	Driver ins	tallation	8
3-4.	Software	ininstallation	10
3-5.	Magnesca	le connection 1	1
4.	Starting u magnesca	up the software and supplying power to the ale1	2
4-1.	Starting u	p the software 1	2
4-2.	Ending th	- e software 1	13
4-3.	Supplying	power to the magnescale	14
4-4.	Stopping	the power supply to the magnescale	14
4-5.	System se	ttings 1	15
5.	Monitor	ing Lissajous signals 1	6
5-1.	Monitorin (MGS Liss	ng the Lissajous signal of a single-head magnescale sajous)	16
	5-1-1.	MGS Lissajous screen	16
	5-1-2.	Starting and stopping monitoring	18
5-2.	Monitoring	the Lissajous signals of a dual-head magnescale (MGS RS Lissajous)	20
	5-2-1.	MGS RS Lissajous screen	20
	5-2-2.	Starting and stopping monitoring	22

6.	Troubles	hooting	24
6-1.	Trouble w	hen connecting the power supply	24
	6-1-1.	The Connect button is not displayed.	24
	6-1-2.	Power is not supplied to the magnescale even when the Connect button is clicked	24
	6-1-3.	The message "Couldn't power on scale." appears when power is supplied.	25
6-2.	Trouble d	uring monitoring	26
	6-2-1.	Measurement does not start even when "Start" is clicked	26
	6-2-2.	Measurement does not stop even when "Stop" is clicked	26
6-3.	Trouble w	hen stopping the power supply	27
	6-3-1.	Stopping the power supply fails even when the Connect button is clicked	27
7.	Specifica	tions	28
8.	Dimensi	ons	29

# 1. Outline

#### 1-1. Introduction

The AC20-B100 is a monitoring tool used to perform magnescale failure analysis and to check magnescale operation after installing or replacing magnescales. This tool is used by connecting it to a computer to which the special software<sup>\*1</sup> has been downloaded and a compatible magnescale.

\*1: This software can be used with compatible magnescale products as of October 31, 2015. Download the software from the Magnescale website.

#### 1-2. Major functions and features of the software

#### Lissajous signal monitoring

Use the monitoring function that matches the magnescale.

- Lissajous monitoring function (for single-head magnescales)
- RS Lissajous monitoring function (for dual-head magnescales)

#### 1-3. Product configuration

AC20-B100	
Software	MGS Monitoring System
	(Download from the Magnescale website.)
USB cable	× 2 (accessory)
Adaptor cable	CE35-02 (compatible controller: Mitsubishi Electric Corporation)
(sold separately)	CE36-02 (compatible controller: FANUC Corporation)
	CE37-02 (compatible controller: SIEMENS AG)
Special cable	Used only with the SR77, SR87 or RU77 series. Contact our sales
	representative.

# 2. Names and functions of each part



Name	Description	
① ENCODER Connector	Connects to the magnescale using the adaptor cable (sold	
	separately)	
2 USB Connector	Connects to the computer using the supplied USB cable.	
③ AUX-POWER Connector	Connects to the computer using the supplied USB cable when using a dual-head magnescale. (An external DC 5 V power supply adaptor can also be connected.)	

# 3. System environment and setup

#### 3-1. Compatible system environment

#### 3-1-1. Compatible magnescales

The following magnescales are compatible.

Single-head magnescales	Dual-head magnescales	
SR27A Series	RS87 Series	
SR67A Series	RS97 Series	
SR77 Series*		
SR87 Series*		
RU97 Series		
RU77 Series <sup>*</sup>		

\*: Special cable required. Contact our sales representative.

#### 3-1-2. System requirement

Environment
Intel Core i3 or higher recommended <sup>*1</sup>
1 GB or higher recommended <sup>*1</sup>
Windows 7 (32bit/64bit of each edition)
$1080 \times 800$ pixels or higher <sup>*1</sup>
$2.0^{*2}$

\*1 : It must satisfy the requirements of the OS.

\*2 : IA USB2.0 compatible hub is required when using a USB3.0 port.

#### 3-2. Software installation

1 Download the MGS Monitoring System from the Magnescale website. URL : http://www.magnescale.com/mgs/language/english/product/

Magnescale			Japanese	English	German
Homo	Products	About company	News release	Contact	-
HOME > Products > Mag	nescale > AC20 Monito	aring System			
LASERSCALE	AC20 M	onitoring S	ystem Magnescal	•	
Magnescale					
Linear		100			
58274					
SR67A					1
SR77				C P P	1
SR87					
SR74/75					0
SR84/85			Features specifi	cations Manual	Software
SL110	Feature				
R597	1				
RU97					
RU77					
R5310					
Interpolator					
NJ100/110					
MJ830/831					
Counter					
LH70					
LH71					
LH72					
LY71					
LY72					
LG20					
Software					
AC20 Monitoring					
Digital Gauge					
		and an			Transa of
About company		Laterscale			verms of up
News release		Magnescale			
Contact		Digital Gauge			
MCSM0 Install	angala Angala				
Download	l file				

**2** Double-click the downloaded file. The folders contained in the file are displayed.

🕘 🗸 📕 🕨 MGSMo	nSysInstaller 🕨	- 4 <sub>4</sub>	Search MGSMonSysli	nstaller	
Organize • Include	in library • Share with • B	urn New folder		s • 🗈	0
Favoits     Foroits     Foroits     Powers     Compare     Vides     Vides     Vides     Compare     Local Disk (C)      Network	Name Drivers USStupPorequisites Setup.ore	Date modified 127/201510-64 AM 127/201510-64 AM 127/2015 6-63 PM	Type File folder File folder Application	Size 3,455 KB	
3 items					
9 🙆 🚞		JP 4	8 A - 18 🕅	10:56	AM

#### **3** Double-click "setup.exe."



#### 4 Click "Next>."

The Software License Agreement appears.

**5** If you agree to the displayed license conditions, select "I accept the terms in the license agreement" and then click "Next>."



The Customer Information window appears.

MGSMonitoringSystemInstaller - InstallShield Wizard Customer Information Please enter your information.	
⊔ser Name:   <mark>¥ISSI218</mark> _@rganization: 	
InstallShield < Back	Next > Cancel

- 6 Enter the following items to the Customer Information window. User Name : User name Organization: Company name
- 7 Click "Next>."

A dialog box appears notifying that installation is ready.



8 Click "Install."

Installation starts.

An installation progress bar appears during installation.



**9** When the dialog box shown below appears, click "Finish."

🖞 MGSMonitoringSystemInstaller - InstallShield Wizard				
3	InstallShield Wizard Completed The InstallShield Wizard has successfully installed MGSMontoringSystemInstaller. Click Finish to exit the wizard.			
	< Back Finish Cancel			

**10** Confirm that the "MGSMonitoringSystem" icon appears on the computer desktop.



The installation is complete.

#### 3-3. Driver installation

- 1 Connect the AC20-B100 to the computer using the supplied USB cable.
- **2** Click the "Drivers" folder within the installer installed in section 3-2.
- **3** Double-click the "CDM v2.12.06 WHQL Certified.zip" file.



The file is extracted.

- **4** Click "Device Manager" on the Control Panel of the computer.
- 5 Right-click "Magnescale AC20-B100" and select "Update Driver Software."



The Update Driver Software window opens.



Click "Browse my computer for driver software."



**7** Designate the file extracted in step 3 in the "Search for driver software in this location" field, and click "Next".



Device driver installation starts.

**8** When the dialog box shown below appears, click "Close" to complete the installation.



#### 3-4. Software uninstallation

- 1 Click "Programs and Features" on the Control Panel of the computer.
- **2** Double-click "MGSMonitoringSystem" in the displayed list of software.

				- # ×
🕒 🗢 🚾 🕨 Control Panel 🕨	Programs  Programs and Features	-	Search Programs and	Features 🔎
Control Panel Home View installed updates Wiew Windows features on or	Uninstall or change a progra To uninstall a program, select it from	am n the list and then c	lick Uninstall, Change, or Rep	air.
011	Organize - Uninstall Change F	tepair		··· • 🔞
	Name		Publisher	Installed On
	Dell ResourceCD     Lhaplus			11/10/2015 11/19/2015
	MGSMonitoringSystem		Magnescale Co., Ltd.	12/1/2015
	Microsoft J&T Framework 45		Microsoft Corporation	11/10/2015
	•	m		Þ
	Magnescale Co., Ltd. Proc	duct version: 1.00.0 Help link: http:/	000 /www.magnescale.com	

The dialog box shown below appears.

Programs and Features	
Are you sure you want to uninstall MGSMor	itoringSystemInstaller?
In the future, do not show me this dialog box	Yes No

**3** Confirm the message and click "Yes."

An uninstallation progress bar appears during uninstallation.

When "MGSMonitoringSystem" disappears from within "Programs and Features, uninstallation is complete.

#### 3-5. Magnescale connection

Connect the AC20-B100 to the magnescale using the adaptor cable (sold separately).

<sup>\*</sup> The SR77, SR87 and RU77 series require a special cable, so contact our sales representative.



#### **Checks after connection**

After all the cables are connected, confirm with the LEDs on the AC20-B100 that there are no problems with the connections.

Confirm in the condition with the computer turned on.

USB connector : Lights in green ENCODER connector : Lights in green

# 4. Starting up the software and supplying power to the magnescale

#### 4-1. Starting up the software

**1** Double-click the MGSMonitoringSystem icon on the computer desktop.



The software starts up.

Magnesca	ale 1.0.00			_	System
123456 MGSL	issajous MGS RS Lissajous				
	Measure Start	scale Type : Position :	Protocol : 0.000000	Serial Number :	Stopping
	0 Curo			1001-	
	Data Clear			NO	
				807 403- 303- 203-	
	Recording Dat	-0.8 - Sin 20 File	X8 -0.6 -0.4 -0.2 0 0.2 : 0.000000 Cos : 0.000000	0.4 0.6 0 0.000000	
	Jare ino .				

Connect button

If the AC20-B100 is connected properly to the computer, a button showing the serial number of the connected AC20-B100 appears on the left side of the window. If the AC20-B100 is not connected when the software starts up, the button appears when the AC20-B100 is connected.

This button (Connect button) is used to connect the power to the magnescale. The serial number text color indicates the power connection status.

White : OFF Light blue : ON

#### 4-2. Ending the software

- **1** Make sure that the power connection to the magnescale is OFF (the Connect button text is white).
- **2** Click "× (Close)" at the upper-right corner of the window.

gnescale				SY
MGSLissajous MGS RS Lissajous				
Measure Scale Info	Scale Type :	Protocol :	Serial Number :	
Start	Position :	0.000000		
Record				
0			121.0+	
Save				
			<u></u> ===	
Data Clear			710-	
			60.	
	0.2			
			x10-	
			21.0	
	-0.8 Sin :	-0.6 -0.4 -0.2 0 0.2 0.4 0.000000 Cms: 0.000000	Level : 0.000000	
Recording	Data File			

#### 4-3. Supplying power to the magnescale

**1** Click the Connect button.

Power is supplied to the connected magnescale. The Connect button text changes to light blue.



#### 4-4. Stopping the power supply to the magnescale

**1** Make sure that the measuring function of the magnescale is stopped (the status indication is "Stopping...").



**2** Click the Connect button.

Power supply to the magnescale and to the AC20-B100 is stopped. The Connect button text changes to white.



#### 4-5. System settings

Make the software settings, such as the message language and the window display method. The contents set here are automatically saved when the software is ended normally.

1 Click "System" at the upper-right corner of the software window.



Open the "SystemMenu" tab to display the system settings window.

Intagrie	SCAIE 0.0.00		Jystein
10000	MGSUssajous MGS R5 LI	Jissajous SystemMenu	
	System Information	MGSMonitoringSystem Version: 0.2.1.18	
	System Setting		
	Current Culture :	日本語 (日本)	
	Language :	Ja-JP ja-JP	
	Expert Mode :	ExpertMode	
	Application Setting -		
	Application Type :	Basic Basic	
	Window Mode :	SingleMode	
	Default Module :	MGSLissajous • MGSLissajous	
	Data Folder :	C:VUsersYsh-shimizuVDesktop	
	Template File :		
	SmartSCALE Setting -		
	ABS Device ID :		
	INC Device ID :		
	Check Type :	Check	

#### **System Information**

This displays the software name and version.

#### **System Setting**

Language : Selects the message language. (Japanese / English) Expert Mode : This function is for software maintenance. It is normally not used.

#### **Application Setting**

Window Mode : Selects the window display. (tab display / single windows)

Default Module : Selects the functions to be displayed as standard when the software starts up.

Data Folder : Sets the folder in which data is saved.

Smart Setting is not used.

# 5. Monitoring Lissajous signals

# 5-1. Monitoring the Lissajous signal of a single-head magnescale (MGS Lissajous)

Use the "MGS Lissajous" monitoring function to monitor the Lissajous signal of a single-head magnescale such as the SR series or RU series.

		E	System
Nover Sego Record 0 Sove Code Cover Code Code Cover Code Code Cover Code Code Code Code Code Code Code Code	Type: 51574.6316427 Period: Summe 276.957920	Seriel Hunder : 00305 Measuring	O     O     Constant of the second seco
Precording Data File			
(5) Control buttons	③ Lissajous display	④ Signal strength I	evel indication

#### 5-1-1. MGS Lissajous screen

#### $\textcircled{1} \quad \textbf{Scale information} \quad$

This displays the information of the connected magnescale.

#### 2 Magnescale position and status

This displays the position information read by the magnescale and the magnescale status. The position is displayed from 0 degrees to 360 degrees for a rotary magnescale (encoder), or as the absolute position (unit: mm) for a linear magnescale. The position information is undetermined while monitoring is stopped.

#### **③** Lissajous display

This graph displays the magnescale sensor signal as a Lissajous figure. When the signal is inside the two red dashed lines, the signal is normal.

#### **④** Signal strength level indication

This graph shows the signal strength of the Lissajous signal. (% display) This corresponds to the light blue line in the Lissajous display.

#### **5** Control buttons

These are used to start and stop monitoring.

#### **Control field details**

#### Measuring: "Start/Stop" button

This starts and stops monitoring. This button can be used when power is supplied to the magnescale and a specific magnescale is selected in "Scale Information." Always stop monitoring before stopping the power supply to the magnescale.

#### Record Lissajous Data: Check box

Place a check mark in this check box to record the monitored Lissajous data. When this check box contains a check mark, the Lissajous data currently being monitored is accumulated.

#### Save: "Save Data" button

This saves the accumulated Lissajous data in a folder. Always stop monitoring before saving data.

Clear Recorded Data: "Clear Data" button This clears the accumulated data.

#### 5-1-2. Starting and stopping monitoring

**1** Click the "MGS Lissajous" tab in the condition with the MGSMonitoringSystem software started up.

The window shown below appears.

MGS Monitoring System				
Magnescale				System
10000 MGSLissajous MGS R5 Li	issajous			
Measure	Scale Information	Protocol :	Serial Number :	]
Start	Position :	0.000000		Stopping
Record	Lissajous			
Ů	0.6			
Save	0.4		× × × × × × × × × × × × × × × × × × ×	
Data Clear	0.2			
	0-			
	-0.2		×00	
	-0.6		200	
	-0.8		16.0-	
	-u Sin :	s -0.6 -0.4 -0.2 0 0.2 0.4 0.000000 Cos : 0.000000	Level : 0.000000	
	Recording Data File			

- **2** Make sure that power is supplied to the magnescale (the Connect button text is light blue).
- **3** Right-click the "Scale Information" combo box and select the magnescale to be connected.



The magnescale model name, protocol name, and serial number are displayed in the "Scale Information" field.

**4** Click the "Measuring: [Start/Stop]" button in the "Control" field. The status indication changes from "Stopping..." to "Measuring...", and monitoring starts.



When the "Measuring: [Start/Stop]" button in the "Control" field is clicked while the status indication is "Measuring...", monitoring stops and the status indication changes to "Stopping...."

(E) 19

# 5-2. Monitoring the Lissajous signals of a dual-head magnescale (MGS RS Lissajous)

Use the "MGS RS Lissajous" monitoring function to monitor the Lissajous signals of a dual-head magnescale such as the RS series.



#### 5-2-1. MGS RS Lissajous screen

#### ① Scale information

This displays the information of the connected magnescale. During monitoring, the position information read by the magnescale and the magnescale status are also displayed here. The position information is displayed from 0 degrees to 360 degrees. The position information is undetermined while monitoring is stopped.

#### 2 Lissajous displays

These graphs display the magnescale Head1 and Head2 sensor signals as Lissajous figures. When the signal is inside the two red dashed lines, the signal is normal.

#### **3** Signal strength level indication

This graph shows the signal strength of the Lissajous signal. (% display) This corresponds to the light blue line in the Lissajous display.

#### **④** Level angle indication

This shows the signal strength level at each angle from 0 degrees to 360 degrees.

#### **5** Control buttons

These are used to start and stop monitoring.

#### **Control button display details**

#### "Start/Stop" button

This starts and stops monitoring. This button can be used when power is supplied to the magnescale and a specific magnescale is selected in "Scale Information." Always stop monitoring before stopping the power supply to the magnescale.

#### "Record" button

Place a check mark in this check box to record the monitored Lissajous data. When this check box contains a check mark, the Lissajous data currently being monitored is accumulated.

#### "Save" button

This saves the accumulated Lissajous data in a folder. Always stop monitoring before saving data.

"Clear Data" button This clears the accumulated data.

#### "Set Origin" button

When this is clicked, the position information at that time is set as the reference point. This is a temporary setting, and the reference point position returns to the original position when the software is ended. (This setting does not change the reference point of the magnescale.)

#### 5-2-2. Starting and stopping monitoring

**1** Click the "MGS RS Lissajous" tab in the condition with the MGSMonitoringSystem software started up.

The window shown below appears.



- **2** Make sure that power is supplied to the magnescale (the Connect button text is light blue).
- **3** Right-click the "Scale Information" combo box and select the magnescale to be connected.



The magnescale model name, protocol name, and serial number are displayed in the "Scale Information" field.

**4** Click the "Start" button in the "Measure" field.

The status indication changes from "Stopping..." to "Measuring...", and monitoring starts.



When the "Stop" button in the "Measure" field is clicked while the status indication is "Measuring...", monitoring stops and the status indication changes to "Stopping...."

# 6. Troubleshooting

#### 6-1. Trouble when connecting the power supply

#### 6-1-1. The Connect button is not displayed.

Cause	Action
The AC20-B100 is not connected to the computer.	Check the connection. If the USB LED on the AC20-B100 lights in green, the AC20-B100 is connected properly.
The driver is not installed.	Refer to "3-3. Driver Installation" and install the driver software.
The USB cable is too long.	The USB standard specifies that USB cables should be 5 m or shorter. Replace the USB cable with one that conforms to the standard.
Noise is superposed onto the USB cable.	Keep the USB cable (and the computer) as far as possible from sources of noise. When used in a noisy environment, noise may be superposed onto the USB cable and prevent normal communication.

# 6-1-2. Power is not supplied to the magnescale even when the Connect button is clicked.

Cause	Action	
The AC20-B100 and the magnescale are not connected.	<ol> <li>Check the connection between the AC20-B100 and the adaptor cable. If the Encoder LED on the AC20-B100 ligh in green, the adaptor cable is connected properly to the AC20-B100.</li> </ol>	
	(2) Check the connection between the adaptor cable and the magnescale cable.	
	(3) Check the connection between the magnescale cable and the magnescale.	
Insufficient power supply	When using a magnescale with high power consumption such as the RS series, bus power supply using only the USB cable from the computer may be insufficient. Connect the AC20-B100 and the computer with a USB cable. (In this case, the computer and the AC20-B100 are connected by two USB cables.)	
Power supply was not stopped properly when a different magnescale was connected.	End the software, disconnect and reconnect the USB connector of the AC20-B100, restart the software, and then perform connection again. If a different magnescale is connected in the condition with the software started up, the connection and disconnection operation may not be performed properly and normal communication may not be possible.	

Cause	Action
Insufficient power supply	When the cable between the magnescale and the AC20-B100 is long, the power supply may be insufficient due to the cable internal resistance in rare cases. Connect the AC20-B100 and the computer with a USB cable. (In this case, the computer and the AC20-B100 are connected by two USB cables.)
Power supply was not stopped properly when a different magnescale was connected.	End the software, disconnect and reconnect the USB connector of the AC20-B100, restart the software, and then perform connection again. If a different magnescale is connected in the condition with the software started up, the connection and disconnection operation may not be performed properly and normal communication may not be possible.
An incompatible magnescale is connected.	The MGS Monitoring Software can be connected only to specific magnescales. Refer to "3-1-1. Compatible magnescales" for the connectable magnescale products.
The proper cable is not used.	A special magnescale cable is required only when using the SR77, SR87 or RU77 series. Contact our sales representative.

6-1-3. The message "Couldn't power on scale." appears when power is supplied.

#### 6-2. Trouble during monitoring

Cause	Action
Power is not supplied to the AC20-B100.	Select the AC20-B100 to be connected from the device list on the left side of the software window, and supply power. When power is supplied correctly, the Connect button text changes to light blue. After that, measurement can be started when the appropriate magnescale is selected from the "Scale Information" combo box.
The appropriate magnescale is not selected.	Select the magnescale to be connected from the "Scale Information" combo box in the condition with power supplied.
An incompatible scale is selected.	The MGS Lissajous function is for single-head magnescales. Use the MGS RS Lissajous function for a dual-head magnescale.
	The MGS RS Lissajous function is for dual- head magnescales. Use the MGS Lissajous function for a single-head magnescale.
The magnescale is not responding properly.	Power may have been supplied again without stopping the power supply correctly during the previous monitoring. Disconnect and reconnect the USB connector of the AC20-B100, restart the software, and click "Start." When monitoring still cannot be performed properly, the magnescale may not be operating correctly. Contact our Service Department.

#### 6-2-1. Measurement does not start even when "Start" is clicked.

#### 6-2-2. Measurement does not stop even when "Stop" is clicked.

-	
Cause	Action
The connection cable with the AC20-B100 has become disconnected.	Click "X" at the upper-right corner of the window to forcibly end the software. Then, restart the software, check the connections with the AC20-B100, and perform the procedure again starting from supplying power.

#### 6-3. Trouble when stopping the power supply

# 6-3-1. Stopping the power supply fails even when the Connect button is clicked.

Cause	Action
Measurement is underway.	Click "Stop" to end measurement and check that the status indication is "Stopping", then stop the power supply. When the status indication is "Measuring," measurement is underway. Power supply can be stopped only in the condition with measurement stopped.

# 7. Specifications

#### AC20-B100

ltem	Specifications
Connection with the computer	USB 2.0 Full Speed (12 Mbps)
Power consumption	0.4 W max. (AC20-B100 standalone)
Input voltage range	DC 5 V $\pm$ 0.25 V (USB bus power standard)
Operating temperature	0 °C to 40 °C (no condensation)
Storage temperature	-10 °C to 60 °C (no condensation)
Mass	150 g
External dimensions	Refer to "8. Dimensions"

# 8. Dimensions



このマニュアルに記載されている事柄 の著作権は当社にあり、説明内容は機 器購入者の使用を目的としています。 したがって、当社の許可なしに無断で 複写したり、説明内容(操作、保守な ど)と異なる目的で本マニュアルを使 用することを禁止します。

本手册所记载的内容的版权归属 Magnescale Co., Ltd., 仅供购买本手 册中所记载设备的购买者使用。

除操作或维护本手册中所记载 设备的用途以外,未经 Magnescale Co., Ltd. 的明确书面许可,严禁复制 或使用本手册的任何内容。

The material contained in this manual consists of information that is the property of Magnescale Co., Ltd. and is intended solely for use by the purchasers of the equipment described in this manual.

Magnescale Co., Ltd. expressly prohibits the duplication of any portion of this manual or the use thereof for any purpose other than the operation or maintenance of the equipment described in this manual without the express written permission of Magnescale Co., Ltd. Le matériel contenu dans ce manuel consiste en informations qui sont la propriété de Magnescale Co., Ltd. et sont destinées exclusivement à l'usage des acquéreurs de l'équipement décrit dans ce manuel. Magnescale Co., Ltd. interdit formellement la copie de quelque partie que ce soit de ce manuel ou son emploi pour tout autre but que des opérations ou entretiens de l'équipement à moins d'une permission écrite de Magnescale Co., Ltd.

Die in dieser Anleitung enthaltenen Informationen sind Eigentum von Magnescale Co., Ltd. und sind ausschließlich für den Gebrauch durch den Käufer der in dieser Anleitung beschriebenen Ausrüstung bestimmt.

Magnescale Co., Ltd. untersagt ausdrücklich die Vervielfältigung jeglicher Teile dieser Anleitung oder den Gebrauch derselben für irgendeinen anderen Zweck als die Bedienung oder Wartung der in dieser Anleitung beschriebenen Ausrüstung ohne ausdrückliche schriftliche Erlaubnis von Magnescale Co., Ltd.

#### 日本からの輸出時における注意

本製品(および技術)は輸出令別表第1の16の項(外為令別表16の項)に該 当します。キャッチオール規制による経済産業省の許可要否につきましては、 輸出者様にてご確認ください。

#### For foreign customers

**Note:** This product (or technology) may be restricted by the government in your country. Please make sure that end-use, end user and country of destination of this product do not violate your local government regulation.

#### 株式会社マグネスケール

〒 259-1146 神奈川県伊勢原市鈴川 45

Magnescale Co., Ltd. 45 Suzukawa, Isehara-shi, Kanagawa 259-1146, Japan

AC20-B100 2-A02-105-0B このマニュアルは再生紙を使用しています。 2015.12 Printed in Japan ©2015 Magnescale Co., Ltd.