

Preset operation (LY71)

This describes a preset operation that sets an arbitrary value.

Up to 3 preset values can be saved.

Setting preset values

①

Makes the preset operation possible.

Press key. (lamp lighting)

②

Press key for the axis you want to set.

The leftmost segment flashes.


If you have previously entered a preset value, that value will be displayed.

③


Enter the set value with the numerical keys and confirm the value with key.

Example: -15.0000

Method 1 (simple input)

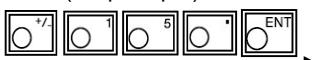

Method 2 (input all numerical values)

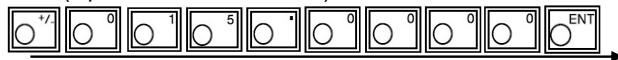

④

Up to 3 preset values can be set for each axis

You can enter the following preset values by pressing key on the axis you want to set and then pressing key.

⑤

If you have set preset values in the past, pressing key will display the preset values in sequence.

⑥


Press key to confirm the preset value you entered.

⑦


Press key to end the preset operation. (lamp off.)

ABS lamp flashes

The leftmost segment flashes

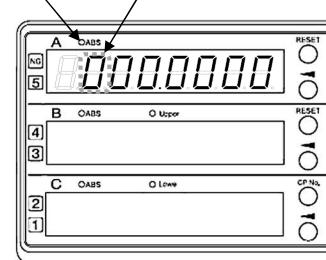

Up to 3 preset values can be set for each axis

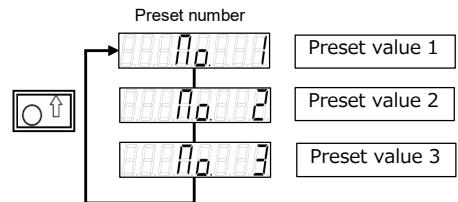

Recall preset values

①

Makes the preset operation possible.

Press key. (lamp lighting)

②

Press key for the axis you want to set.

The leftmost segment flashes.

If you have previously entered a preset value, that value will be displayed.

④

If you have set preset values in the past, pressing key will display the preset values in sequence.

⑤

Press key to confirm the preset value you entered.

⑥

Press key to end the preset operation. (lamp off.)